


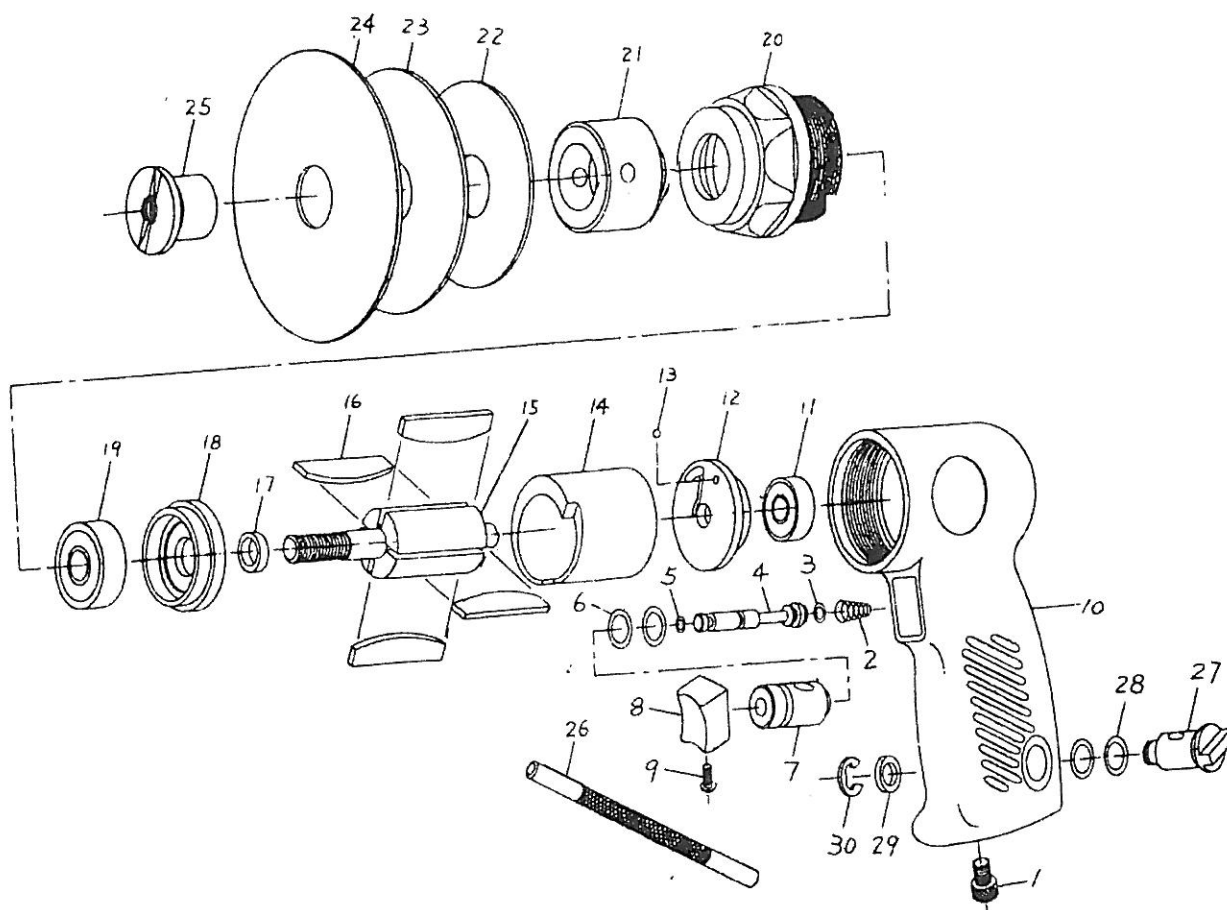

NO.	Part No.	Description	Qty	NO.	Part No.	Description	Qty
1	1204S01A	Screw	1	16	1204S16A	Rotor Blade	4
2	1204S02A	Spring	1	17	1204S17A	Bearing Spacer	1
3	1204S03A	O-Ring	1	18	1204S18A	Front Plate	1
4	1204S04A	Valve Stem	1	19	1204S19A	Bearing	1
5	1204S05A	O-Ring	1	20	1204S20A	Clamp Nut	1
6	1204S06A	O-Ring	2	21	1204S21A	Sanding Adapter	1
7	1204S07A	Valve Body	1	22	1204S22A	Backing 3" Plate	1
8	1204S08A	Trigger	1	23	1204S23A	Backing 4-1/2" Plate	1
9	1204S09A	Screw	1	24	1204S24A	Backing 5-1/2" Plate	1
10	1204S10A	Housing	1	25	1204S25A	Adaptor Lock Down	1
11	1204S11A	Bearing	1	26	1204S26A	Holding Tool	1
12	1204S12A	Rear Plate	1	27	1204S27A	Valve Stem	1
13	1204S13A	Steel Ball	1	28	1204S28A	O-Ring	2
14	1204S14A	Cylinder	1	29	1204S29A	Washer	1
15	1204S15A	Rotor	1	30	1204S30A	Snap Ring	1