


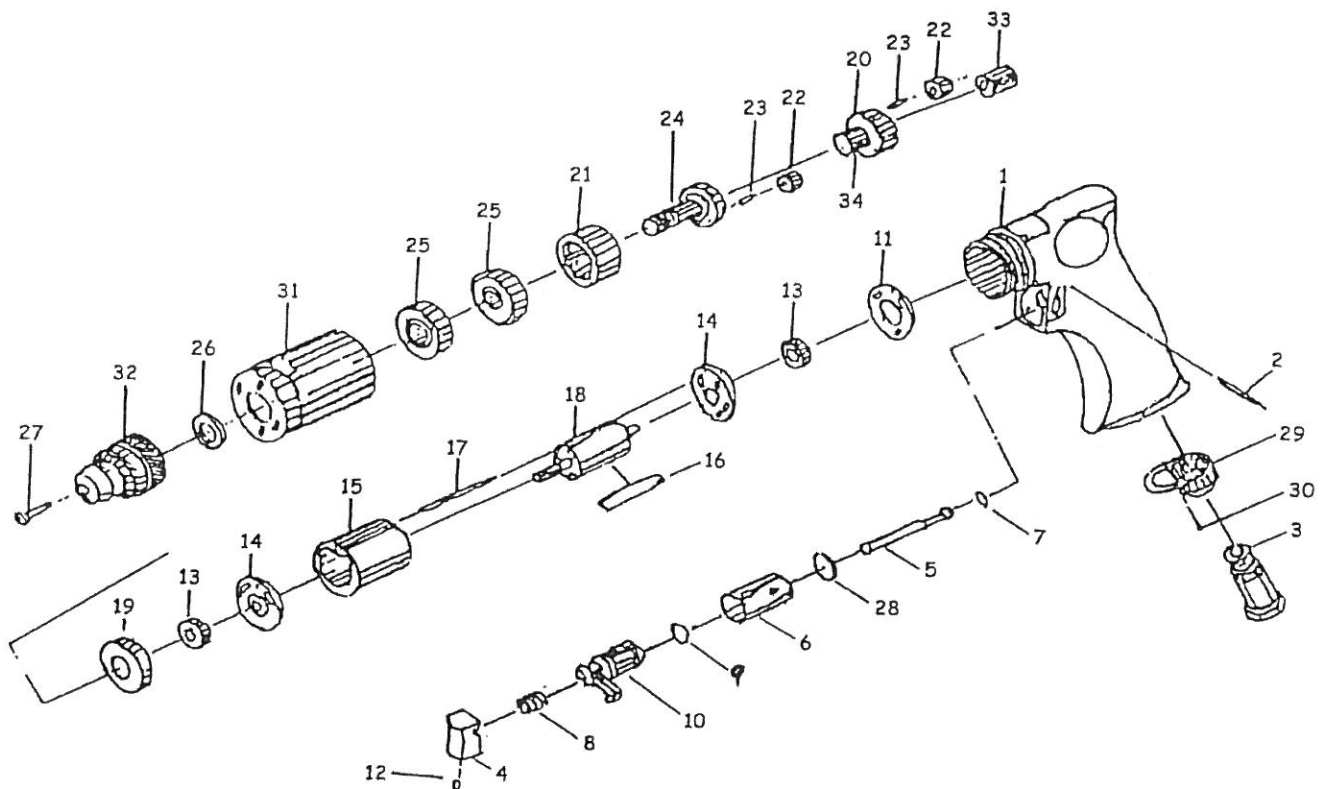

No.	Part No.	Description	Qty	No.	Part No.	Description	Qty
1	4204D01	Housing	1	18	4204D18	Rotor	1
2	4204D02	Spring Pin	1	19	4204D19	Spacer	1
3	4204D03	Air Inlet	1	20	4204D20	Planet Gear Plate	1
4	4204D04	Trigger	1	21	4204D21	Gear Link	2
5	4204D05	Valve Stem	1	22	4204D22	Planet Gear	6
6	4204D06	Reverse Bushing	1	23	4204D23	Pin	6
7	4204D07	O-Ring	1	24	4204D24	Planet Link Spindle	1
8	4204D08	Valve Spring	1	25	4204D25	Ball Bearing	2
9	4204D09	O-Ring	1	26	4204D26	Washer	1
10	4204D10	Reverse Lever	1	27	4204D27	Chuck Screw	1
11	4204D11	Motor Gasket	1	28	4204D28	O-Ring	1
12	4204D12	Set Screw	1	29	4204D29	Exhaust Deffuser	1
13	4204D13	Ball Bearing	2	30	4204D30	Screw	2
14	4204D14	End Plate	2	31	4204D31	Clamp Nut	1
15	4204D15	Cylinder	1	32	4204D32	Drill Chuck	1
16	4204D16	Rotor Blade	5	33	4204D33	Gear	1
17	4204D17	Pin	1	34	4204D34	Gear	1